
FLYING MOLE

Digital Integrated Amplifier

CA-SE


Owner's Manual

Thank you for purchasing the CA–S3.
In order to use the product in a safe manner, please read this Owner's
Manual thoroughly before using.
Also, keep this manual for future reference.

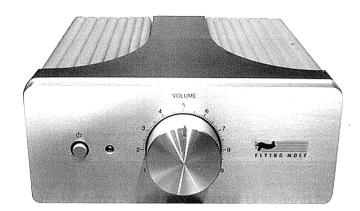

■ Accessory Checklist **■**

Before proceeding with the setup, make sure that the following accessory is included in the package. If it is missing, please contact the dealer whom you purchased the amplifier from, or Flying Mole Corp.

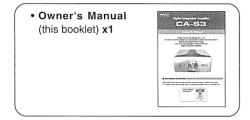

Safety Instructions

THE APPARATUS IS NOT WATERPROOF, TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE AND DO NOT PUT ANY WATER SOURCE NEAR THIS APPARATUS, SUCH AS VASE, FLOWER POT, COSMETICS CONTAINER AND MEDICINE BOTTLE, ETC.

IMPORTANT NOTICE

If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures :

Relocate either this product or the device that is being affected by the interference. Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna.

If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product.

If you can not locate the appropriate retailer, please contact Flying Mole Corporation.

2 Features

- Utilizing the acclaimed Bi-Phase PWM amplifier technology used in our DAD-M100pro
- Original speaker connectors with large contact area
- Ultra-high quality One Pole Pre-Amplifier minimizes sound deterioration at the low level of volume

- CD-case-size compact body with 10 mm thick aluminum front panel realizes high rigidity and superb vibration suppression
- - Total efficiency of 80% at rated output: an amazing low power consumption
 - Complying with *RoHS directives

* Restriction of Hazardous Substances (RoHS) directives :

Use of six (6) kinds of substances (lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyl, and polybrominated diphenyl ether) are restricted.

Safety Instructions



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THIS SYMBOL INDICATES THAT DAN-GEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS LINIT



THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE OWNER'S MANUAL WITH THIS UNIT.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

■ The important safety instructions


- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instruc-
- **8.** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **10.** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operated normally, or has been dropped.

© Component Names

Front Panel

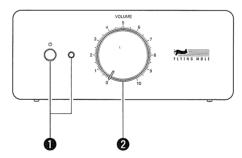

Power Switch/Power Indicator


Used to turn the amplifier's power ON or OFF. The indicator lights when the power is turned ON.

VOLUME Controller

Controls the output level.

Setting the controller to "0" turns down the volume to the minimum.

Rear Panel

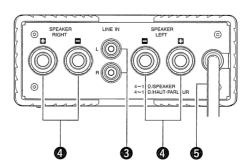

INPUT Jacks

Used to connect the input signal to the amplifier. Connect the jacks to the LINE OUT jacks on a CD player, etc.

4 SPEAKER Connectors

(*Be sure to check polarity before connection)
Used to connect the amplifier to the speaker.
Make sure that the speaker's impedance is between 4 ohms and 16 ohms.

6 AC Power Cable

Connect this cable to AC outlet.

Connecting Devices

- Make sure the power of all related equipments is turned off, when wiring and checking their polarity.
- Make sure that the speaker cable connection is not shorted, before power switch is turned on.
- Connect the power cable after all connections are complete.
- Jack names may be different from this manual.
- * Refer to the owner's manuals of the devices to be connected as well.


SP Terminal Outer Part Pin Jack Cable SP Terminal Inner Part Stripped length: 10 mm - 15 mm Speaker Cable AWG: #6 or smaller **Cross Section View** LINE OUT Jack (L) Outer Diameter: ø6 or smaller SP Terminal Inner Part Memory Player, etc. CD Player, etc. (White) Stereo LINE OUT Jack LINE OUT Jack (R) Speaker Ćable CA-S3 SP Terminal Outer Part Speaker (R) Speaker (L) (£)3 • If this apparatus is left with the SP terminal inner part exposed, you may accidentally get hurt with the tip of the part. 4~1 Ω/SPEAKER 4~1 Ω/HAUT-PARL UR Only remove the SP terminal outer part during the connection of speaker cables. Speaker Cable Speaker Cable (Red) Connect to AC Outlet AC Power Cable SP Terminal Inner Part Pin Jack Cable

Specifications

Rated Output	30W x 2 (4Ω) / 20W x 2 (8Ω)
Frequency Response	5Hz ~ 50kHz (+0 / -3dB) / (8Ω / 1W)
Total Harmonic Distortion	0.05% (15W / 4Ω / 1kHz, 10W / 8Ω / 1kHz)
S/N Ratio	98dB (400Hz — 30kHz BPF)
Input Impedance	50kΩ
Input Jack	RCA PIN (Unbalanced)
SP Output Terminal	Newly-developed solderless type
Conforming Speaker Impedance	4 ~ 16Ω
Power Consumption	15W
Power Supply	AC120V 60Hz (U.S.A. & Canadian model) / AC230V 50Hz (European model)
	Other areas : mentioned on the sheet attached on the bottom cover.
Use environment	0°C ~ 40°C 32°F ~ 104°F
Max. Dimensions	5-3/16"(W) x 2-1/8"(H) x 7-1/16"(D) / 131(W) x 54(H) x 179(D) mm
Weight	1.4kg (3.1 lbs)


^{*} Due to product improvement, specifications and/or product design are subject to change without notice

Dimensions

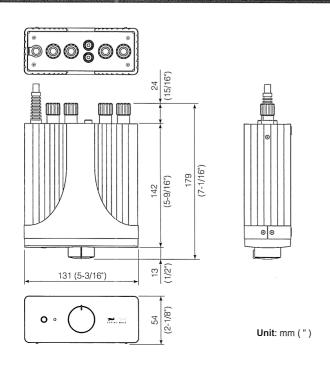

Maintenance

Never use liquids such as benzine, thinners, etc., chemically treated cloths, and do not spray any aerosol type insecticides on the amplifier. Clean the case using only a soft, dry cloth. If the amplifier becomes soiled, mix a solution of water and a neutral detergent then dampen a soft cloth in the solution, wring out as much of the solution as possible, and clean the amplifier. Then use a soft, dry cloth to wipe the surface dry.

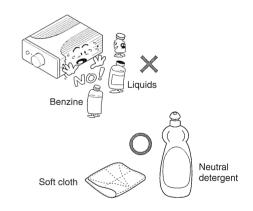

3 Limited Warranty

Warranty period is shown by the distributor in your market.

In case defects occur during this period not due to mishandling or modification, please send the product together with proof of purchase to the dealer where you had purchased or to the following address if it is shown.

(If the cable core is not a single wire but a stranded wire, press the middle portion of the wire

While pushing the speaker cable to the SP terminal inner part, screw in the SP terminal

2 Strip the cover of the speaker cable by 10 to 15 mm (3/8" to 9/16").

3 Press the speaker cable on the SP terminal inner part.

onto the end of the SP terminal inner part.)

outer part.

Questionnaire

There is a questionnaire in the "Support" section in our website. This is for helping us serve you better by developing new products. We look forward to your access to the following URL.

http://www.flyingmole.co.jp

Protection of Personal Information

We use personal information in the questionnaire only for servicing you and for product development.

We take safety measures to prevent leakage of the information as much as we can and we do not reveal it to a third party without your consent.

